

Micro PAVER Version 5.0

User Manual

Released 06.17.2002

PAVER

5.0



US Army Corps
of Engineers

Blank Page

PAVER 5.0

User Manual

US Army Corps of Engineers
Construction Engineering Research Laboratory

Dr. M.Y. Shahin, Principal Investigator

Jeffrey A. Burkhalter, System Development Specialist

Scott J. McDonald, Technical Specialist

Christina Eng, Research Assistant

Craig A. Louden, Research Assistant

Gregory A. Wilken, Research Assistant

Kurt A. Keifer, Research Assistant

<http://www.cecer.army.mil>

<http://www.cecer.army.mil/paver/paver1.html>

Acknowledgments

The pavement management research and development of the PAVER system have been in progress since the early 1970's. These efforts have been sponsored and funded by several agencies. Special thanks is due to the following agencies and their representatives who supported and shared in the development efforts over the years:

- **The US Air Force:** Roy Almendarez, Jay Beam, Carl Borgwald, Don Brown, John Duvall, Jim Greene, Wayne Hudson, Charles McCarol, Ed Miller, Michael Myers, Caren Ouellete, William Peacock, Cliff Sanders, Michael Sawyer, Mark Schumaker, Mike Womack, and Charles York.
- **The US Army:** Ali Achmar, Bill Borque, Dan Boyer, Gary Cox, Mike Dean, Mike Flaherty, Ken Gregg, Jack Hinte, Bob Lubbert, Stan Nickell, Leo Price, Paul Styer, Bill Taylor, and Bob Williams.
- **The US Navy:** Greg Cline, Vince Donnally, Mel Hironaka, Charlie Schiavino, Dean Shabeldeen, and Harry Singh.
- **The Federal Aviation Administration (FAA):** Satish Agrawal, Fred Horn, Michel Hovan, Xiaogong Lee, Aston McLaughlin, Jack Scott, and Dick Worch.
- **The Federal Highway Administration (FHWA):** Frank Botelho, Sonya Hill, Bob Kelly, Ray McCormick, and Lewis Rodriguez.
- **The American Public Works Association (APWA):** Jim Ewing, Christine Johnson, John MacMullen, Dennis Ross, and Dick Sullivan.

Special thanks is due to the Micro PAVER users who have participated for many years in the annual Sponsor/User Group meetings and provided significant feedback for the continuous development of the system. These members include Greg Belancio, Mike Black, Chuck Calloway, Paul Clutts, Andy Doll, Judie Greeson, Mark Justice, Sabine Lundgren, Steve McNeely, Rod Oshiro, Justin Rabidoux, Jeffrey Sabil, Robert Vandertang, and Janpiet Verbeek.

Thanks is due to the CERL research team and University of Illinois Research Assistants who have helped with Micro PAVER over the years: Lisa Beckberger, Margaret Brotan, Jeff Burkhalter, Abbas Butt, Mercedes Crovetti, Christina Eng, K. J. Feighan, Jim Hall, John Heflin, Rich Hoffman, Kurt Keifer, Charles Kemper, Starr Kohn, Ruth Lehmann, Craig Louden, Scott McDonald, Jeffrey Morton, Gary Nelson, Dixon O'brien, Mark Owens, B.J. Park, Mark Pitak, Francine Rozanski, Jeff Schmidt, Judie Simpson, Carol Subick, Chad Stock, Chao-Ming Wang, Jeanette Walther, Gregory Wilken, and Katie Zimmerman. Additional thanks are expressed to University of Illinois faculty Sam Carpenter, Tom Chen, Mike Darter, and Ahmed Sameh.

Special thanks are due to the team at Intelligent Information Technologies (IIT) for system design and programming: Arthur Baskin, Bill Nelson, Mark Brown, and Robert Reinke.

Thanks to the City of Champaign, Memphis International Airport, and the Ohio Department of Aviation for allowing us to attach their databases as examples with the release of Micro PAVER.

Finally, and on behalf of the entire PAVER group, I would like express a special thanks in the memory of John MacMullen of APWA whose support, feedback, and encouragement will be greatly missed.

M. Y. Shahin
Micro PAVER Principal Investigator
U. S. Army Corps of Engineers
ERDC-CERL

Disclaimer

This user manual is furnished by the United States Government and is accepted and used by the recipient with the express understanding that the United States Government makes no warranties, expressed or implied, concerning the accuracy, completeness, reliability, usability, or suitability of any particular purpose of the information or the data contained in this user manual or furnished in connection therewith, and the United States shall be under no liability whatsoever to any person by reason of any use thereof. The user manual belongs to the United States Government. Therefore, the recipient further agrees not to assert any proprietary rights therein or to represent this user manual to anyone as other than a United States Government user manual.

Table of Contents

Acknowledgments	4
Disclaimer	6
Table of Contents	7
Required/Recommended Hardware	13
Updating to Micro PAVER 5.0	14
Micro PAVER v5.0 Improvements	15
Overview	17
Introduction to Micro PAVER	17
PAVER Organization	17
Operating Features	19
Basic PAVER Features	19
Spreadsheet Forms	19
Index Cards	20
Tab Tables	21
Printing Screen Images	22
Units of Measurement	22
Adjusting Table and Graph Sizes	22
EMS Tools in PAVER	23
Right Button Click on Tables	23
Right Button Click on Graphs	24
EMS Query Tool	24
Using the EMS Query Tool	24
Report Viewer - Summary and Detail Options	25
View Menu - Display Specific Report Information	26
Report Viewer Tables	26
Exiting the Report Viewer	27
Database Tools	29
Combine/Subset Database	29
Import / Export	30
5.0 Export Procedure	30
5.0 Import Procedure	31
Database Verification Tools	33
Selectors	35
Navigating the Pavement Inventory	35
The Tree Selector	35
The Tab Selector	36
The GIS Selector	36
The Tree and GIS Selector	37

System Tables	39
Define User Fields	39
NSORT - BSORT - SSORT	39
Additional User Fields	40
Customize Table Headings and Width	40
Inventory Pick Lists	41
M&R Plan Tables	41
Localized M&R	42
Global M&R	42
Major M&R	42
M&R Cost by Condition	43
Budgets	44
Condition Tools	45
Select Condition Types	45
Define Condition and Age Categories	45
Define User Distress Indices	45
Misc. Other Tables	45
Aircraft Type	45
Materials	46
Layer Construct	46
Decimal Settings	46
Unit of Measure (Field) Settings	46
Inventory	47
Definition	47
Managing Pavement Inventory - Basic Operations	47
Creating a Network	48
Creating Branches	49
Creating Sections	50
Conditions/Families	52
EMS Image Viewer	53
Store an Image	53
Viewing Images	54
Edit an Image	54
Other Image File Options	54
Work	54
Traffic	55
NDT and Test	56
Copy and Move Data	56
Inspection	57
PCI and Distress Indices	57
Field Inspection - Basic Operations	57
Entering Inspection Dates and Samples	57
Entering Inspection Information	59
For Maximum Speed - Keyboard Only	60
Batch Inspection Data Entry	60
Calculating the PCI after Inspection	61
Other Conditions	61
Inspection Data Import (PAVER Database)	62

Inspection Schedule	63
Inspection Schedule Report	63
Open Saved Report	64
Family Assignment	65
Change Family Assignments	65
Reports	67
Summary Charts	67
Standard Reports	68
Re-Inspection Report	69
Flexible Report	70
Create New Report	71
Edit Current Report	72
GIS Reports	72
Last PCI	72
General Info	73
Prediction Model	75
Create and Maintain Prediction Models	75
Building Family Models	75
Using the Prediction Model	75
Collect Model Data.....	76
Review Model Data	77
Use Boundary/Outlier	77
Options	78
View Equation and Stats	78
Assign Family	79
Other Condition Prediction Model Features	79
Condition Analysis	81
Condition Analysis Report	81
Overview	81
Configuring the Condition Analysis Report	81
Analyzing Pavements	82
Other Views	83
Open Saved Report	84
M&R	85
M&R Plan	85
Configuring the M&R Report	85
Tab 1 - Scope	85
Tab 2 - Timing	86
Tab 3 - Plan Mode	86
Tab 4 - Policies and Costs	88
Analyzing M&R Activity	90
Summary View Section	90
Detail View Section	91
Open Saved Report	92

Add-Ins	93
PAVERGIS Interface	93
GIS Overview	93
Distinctions between CAD and GIS	93
Polygon and Arc Attribute Tables	93
Software Context	94
Acquiring Computer-Based Graphical Representations	94
Manual Digitization of Preexisting Drawings	94
Scanning Maps or Aerial Photography	94
Modifications to Geographical Representations	95
Build and Clean Operations for Digital Data	97
PAVERGIS Usage	97
First-Time PAVERGIS Setup Summary	97
Steps for Initial Setup	98
Available Data Sources (PAVER & GIS)	98
Preparation of Data	99
Updating Data	100
Exporting PAVER Data (Access/Rbase to dBase)	100
Copying PAVER dBase Data to PAT/AAT	100
Database Editors and Reporting Options	100
Options for Viewing Windows	102
Exiting PAVERGIS	102
Condition Data Import (ASCII)	102
Condition Data Import (Database)	103
Handheld Data Import	103
Micro PAVER Inspection Data Entry Using a Windows CE Handheld Device	103
Hardware/Software Requirements	103
Software Installation	103
Basic Software Operation	104
Process Overview	104
Detailed Process	105
Download Sections to Inspect	105
Inspections Using the Handheld PCI Inspector	106
Backup Inspection Data	107
Import Backup Data into PAVER	108
PAVER Shape File Converter	109
Converting from PAVER 4.x to 5.0	109
Shape File Conversion Procedure	109
Shape File Coordinate Shift	109
Appendix A	111
PAVER/GIS Map Development	111
Overview	111
Developing the CAD Drawing	112
Creating a labeled CAD map of the Coverage area through network definition	112
Terminology	112
Creating a clean CAD drawing for placement in ArcCAD©	113

Creating the Coverage Using ArcCAD®	114
Terminology	114
Defining a THEME	114
Creating the COVERAGE	115
Verify Coverage and fix errors	116
Manual creation of a link table that connects PAVERGIS with the GIS Coverage.....	118
Preparing the data	119
Viewing Polygon Ids with ArcVIEW®	121
Linking the Polygon IDs to the PAVER database	122
Updating the Link Table	123
Displaying pavement data using ArcVIEW® and checking for errors	124
Creating an ArcVIEW® project	124
Checking the linked Coverage for errors	124
Updating the Coverage and Database with New Information	125
Adding Features	125
Removing Features	128
Viewing Workplans and Condition Analyses in ArcVIEW®	130
Glossary	132
References	133
Appendix B	135
Inspection Information File Format (Standard and Extended Formats)	135
Appendix C-1	137
Video Inspection Import Data Format (ASCII Text)	137
Appendix C-2	141
Video Inspection Import Data Format (Access Database)	141
Appendix D	143
Abbreviations of Surface Types	143
Appendix E	145
Pavement Data Exchange (PDE) Format	145
Appendix F	151
Example Pavement Survey Forms	151
Asphalt Surfaced Roads and Parking Lots	152
Concrete Surfaced Roads and Parking Lots	153
Airfield Asphalt Pavement	154
Airfield Concrete Pavement	155
Unsurfaced Roads	156
Appendix G	157
Load & Climate Distresses	157
Asphalt Surfaced Roads and Parking Lots	157
Concrete Surfaced Roads and Parking Lots	157
Asphalt Surfaced Airfields	158
Concrete Surfaced Airfields	159
Unsurfaced Roads	159
Appendix H	161
Micro PAVER Network Installation	161
Glossary	163
Index	168

Blank Page

Required/Recommended Hardware

Required Hardware

200MHz processor

32MB RAM

Microsoft Windows 95/98/2000 or Windows NT

130MB space needed for installation

Recommended Hardware

Fastest processor available

256MB RAM

MS Windows 98

Updating to Micro PAVER 5.0

For Micro PAVER 4.x users, the conversion to Micro PAVER 5.0 is an easy procedure that can be split into a few simple tasks. These tasks include: importing e40 files into PAVER, updating GIS coverages created in PAVER 4.x, and updating some of the system tables in PAVER 5.0.

Updating the Database

The first step is to import the databases created in PAVER 4.x into PAVER 5.0. This update is done using the same Import/Export tool that was featured in previous versions of PAVER. For information on how to import the e40 files see [5.0 Import Procedure](#) on page 31.

Updating the GIS coverage

Converting PAVER 4.2 coverages to 5.0 is a simple two step process. The first step is to convert the coverage (*.cov) file to a shape file (*.shp) in ArcView. Once you have the shape file, you must use the **Shape File Converter** located under the **Add-Ins** menu in PAVER 5.0. For more information on the shape file conversion, see [PAVER Shape File Converter](#) and [Converting from 4.x to 5.0](#) on page 109.

Updating System Tables

In the conversion process between PAVER 4.x and 5.0, some of the system tables in version 4.x do not import changes into PAVER 5.0. If changes or additions were made to the tables in version 4.x you must re-enter the values. The tables that do not import are: **Materials**, **Unit of Measure (Field) Settings**, and **Inventory Pick Lists**. These tables can all be found under the Tables menu in PAVER 5.0. It is recommended that you print out the tables in PAVER 4.x to make the data re-entry process faster. For more information about the [Inventory Pick List](#) see page 41, and for more information about the [Materials](#) and [Unit of Measure \(Field\) Settings](#) tables see page 46. All the information is located in the [System Tables](#) chapter, pages 39-46.

Micro PAVER v5.0 Improvements

Micro PAVER 5.0 has numerous improvements over its predecessor. The first area of improvement is in the **System Tables**, which are used throughout Micro PAVER regardless of database. The second area of improvements is in the **Visual Menu** components, which, when used, are particular to specific databases. The following list outlines many of the important improvements made to the program.

System Tables

Define User Fields > Additional User Fields: Allows the user to define user-specific fields.

M&R Plan Tables > Major M&R > Tab 5: This is a **Priority Table** that is a function of branch use and section rank. Branch use priority and section rank priority are defined by tabs 3 and 4, respectively.

Condition Tools >

- **Define Condition And Age Categories:** This allows the user to define ranges for conditions and ages to be used in all reports including summary charts and condition analysis.
- **Select Condition Types:** The user selects conditions that will be shown throughout Paver, i.e. summary charts, condition analysis, etc...
- **Define User Distress Indices:** The user defines any distress index for any selected groups of pavements. It is important to calculate the index for all sections--this can be a long process that may take up to an hour.

Visual Menu

Selectors: Various selector functions are now available. The combination of **Tree** and **GIS** is used in the **Selection** button on the **PAVER Button Bar**. Making a selection using any of the tools is reflected throughout the system. The selection tools serve as a broadcast system.

Inventory > Copy and Move Data: Allows the user to move work history and inspection data among inventory items.

Inventory > Definition > 3. Section Tab > Conditions/Families: Allows user to view the condition and family assignment for any given section. This function is also available as a new tab on the Inventory\Sections tab.

Reports: There are two new options for reports.

- **Flexible Report:** Allows the user to select what columns are used in the report. Select **Create New Report** to select what columns are included in the report. To choose the columns, highlight the table from the tree with the desired columns. Then select the desired column from the left-hand-side window and move it to the right-hand-side window.
- **GIS Reports:** These provide inventory and PCI data reports.

Condition Analysis > Condition Analysis Report: Part of the output includes GIS views.

M&R >

- **M&R Plan:** On the **Plan Mode** tab, the user selects either **Determine Budget Consequence** (identical to Micro PAVER v4.2) or **Determine Budget Requirements** (new feature).
 - The budget requirement feature allows the user to eliminate backlog in the number of years specified for the plan. The number of years is specified under the **Timing** tab. This is used by clicking the **Backlog elimination in X years** option.
 - The budget requirement feature can also determine the budget required to maintain the current PCI or achieve a desirable PCI in the number of years for the plan. This is used by clicking the **Condition Stabilization** option.
- **Policies and Costs**
 - The user can apply localized policies in the first year as in Micro PAVER v4.2
 - Or you can simply use M&R cost by condition for all years (new). The user may select the major M&R start year and when the user selects a date for major M&R later than the plan start year, you can also select to show the backlog during the time as well. This feature is useful in determining the consequence of no major M&R for a specified time period.

There are also many reporting improvements located throughout the system. Some final things to note: For added convenience, Micro PAVER v5.0 allows the docking of windows. This is accomplished by right clicking the diamond icon on the window desired to be docked. Another added feature is on the **PCI Inspection** form. When you right click on a distress, the distress manual and a description of the distress along with images appear.